

TWINLOCK 2 COUPLER OPERATION - TO RELEASE

Step 1



fig 4.10

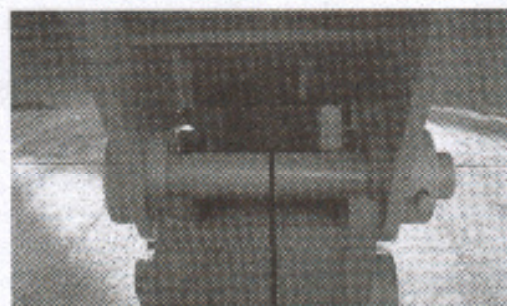


fig 4.11

hook released

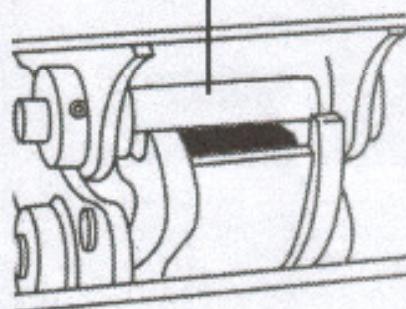


fig 4.12

Place bucket/coupler and dipper arm in a fully curled/crowded position. Switch the coupler operating switch to the **release** or **off** position, the buzzer will sound. Hold the bucket crowd lever for approx. 5 - 10 seconds to allow the hook to fully retract (fig 4.11 and 4.12). The ABS should be sitting free from the hook notches and the bucket/attachment can now be released.



WARNING - Do not try to release or change the bucket near any persons or in any areas that may result in an accident or injury occurring. The switch should be in the **attach** or **on** position at all times, except during bucket/attachment changing only.

Step 2



fig 4.13

Slowly roll out the bucket until the teeth are horizontal. Lower the boom until the bucket is on the ground.

Step 3



fig 4.14

Once the bucket is on the ground continue to curl out the coupler.

Step 4



fig 4.15

Lift the coupler clear of the bucket. The coupler is now safely disengaged.